


BAL 40 Fire Flashings


1. Install Apollo Roofing to Engineering Specifications.
2. Install Apollo Fire Flashings to Roof Panels as shown (Max. allowable Gap <math><2\text{mm}</math>).
3. Seal Apollo Fire Flashings with Soudal Soudaseal FR Grey.
4. Install Apollo Drip Edge Flashing with sealed ends and Gutter as per standard Apollo Installation Instructions.

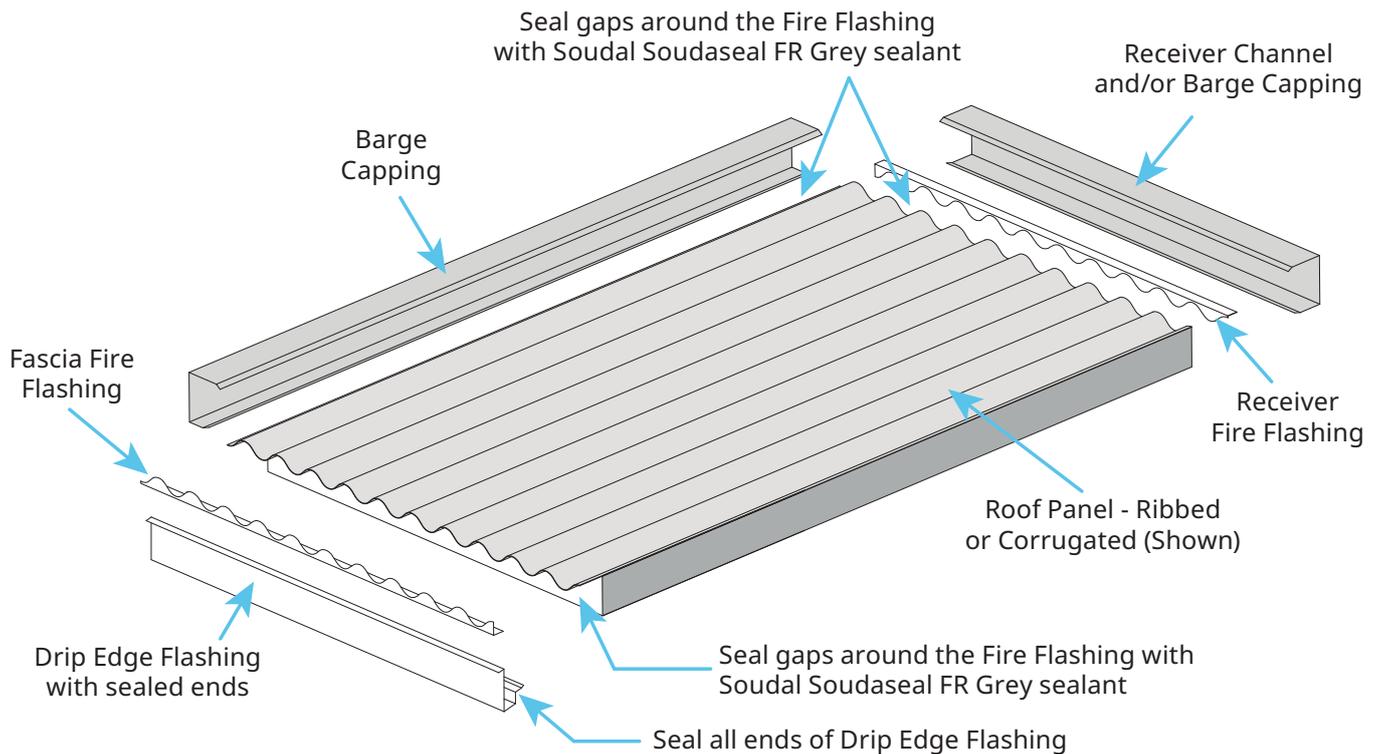

Top View of Roof

Seal gaps around the Fire Flashing with Soudal Soudaseal FR Grey sealant

← Sealant required

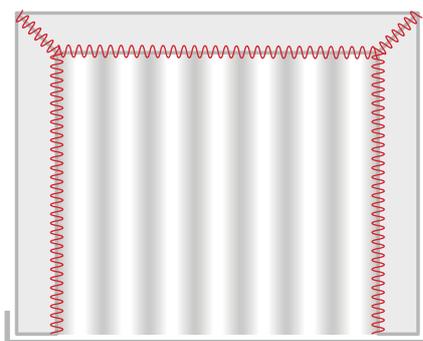

Side View

Seal gaps around the Fire Flashing with Soudal Soudaseal FR Grey sealant

